


NOTES:

1. CONSTRUCT P-401 OVERLAY APPROX. 2 FT. (60 CM) PAST ANGLE LOCATION AND CUT BACK FOR ANGLE INSTALLATION.
2. ADJUST ANGLE LOCATION +/- 2 IN. (5 CM) TO MINIMIZE CUTTING BLOCKS.
3. ADD DRAIN HOLES AS NECESSARY AT LOWEST ELEVATIONS. COVER WITH GEOTEXTILE.

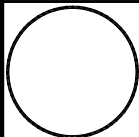

AIRFIELD PAVEMENT INLAY

AT STEEL ANGLE EDGE RESTRAINT DETAIL

DRAWING NO.

ICPI-38

SCALE

NO SCALE